




INSTALLATION GUIDE

This installation guide is applicable for NEPTWIN RGB

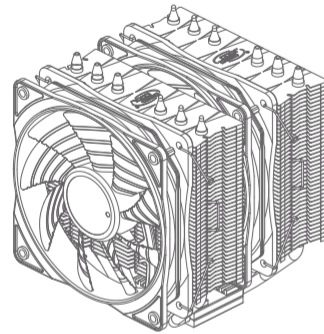

NEPTWIN RGB

PRODUCT SCHEMATIC DRAWING

1 Nut	4 pcs	2 Insulation Pillar	4 pcs	3 Screw Bolt	4 pcs	4 Mounting Bracket (Intel)	2 pcs	5 De-Vibration Buckle	4 pcs
6 Retention Plate	1 pc	7 Back Plate	1 pc	8 Mounting Bracket (AMD)	2 pcs	9 Insulating Washer (For LGA775 only)	1 pc	10 Double-screw Bolt (For LGA20XX only)	4 pcs
11 Thermal Grease	1 pc	12 Heatsink set	1 pc	13 Double-screw Bolt (For AM4 only)	4 pcs	14 RGB Extension cable	1 pc		

INTEL

LGA1366
LGA1155
LGA1151
LGA1150
LGA775

AMD

AM4
AM3+
AM3
AM2+
AM2
FM2+
FM2
FM1

INTEL

LGA2066
LGA2011-v3
LGA2011

RGB Light Connection & RGB SYNC

* Well note: this cable is ONLY applied for RGB Header on Motherboard which owns RGB SYNC function